 
New York Bracket Installation

New York Brackets are standard for all inside and outside mount installations.

1. Prepare the Headrail:

The headrail of your shade has been slotted for New York brackets before being wrapped with fabric.



The number of notches is equal to the number of New York brackets.

Shade Width	# of Brackets
0" - 48"	2
48" - 84"	3
84" - 96"	4

2. Install The Brackets:

Install the New York Brackets in the window to line up with the slots in the headrail. Make sure all the brackets are level with each other.


Remove the wing nuts from the "New York" brackets and slide the shade into position by sliding the shafts of the brackets into the slots cut into the top of the headrail.

3. Secure the Shade: While holding up the shade, reattach the wing nuts to the "New York" brackets and tighten.

Note: Extended New York Brackets are available for outside mounted shades and project the shade out an extra 3/4"

"L" Brackets Installation (Waterfall Only)

"L" Brackets are an alternative outside mount bracket; not recommended for shades with a 6" classic valance. (Waterfall Only)

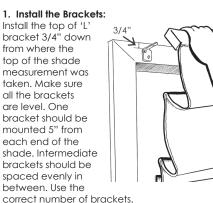

4




2. Secure the Shade:

84" - 96"

Place the headrail on top of the mounted "L" brackets and then secure the shade to the brackets using the provided 3/4" screws.

2" Screws Installation (IM Only)

2" screws are a quick and easy alternative inside mount installation method.

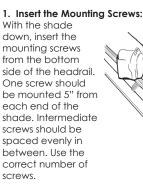

Shade	# of
Width	Brackets
0" - 48"	2
48" - 84"	3
84" - 96"	4

2. Position the Shade:

Hold the shades up and position it in the window opening. Drive the mounting screws up through the headrail into the inside of the window opening, soffit, or ceiling.

Always use the control ring to operate your shade. Just like a spring roller shade, a simple quick tug will get it started. Never pull on the hem to operate your shade. **Adjusting Spring Tension** The tension of your shade can be adjusted to make it go up faster or slower with the white adjustment wheel at the end of the drive tube. If your adjustment wheel If your adjustment wheel in on the LEFT side of in on the **RIGHT** side of vour shade follow these your shade follow these directions. directions. 1. Raise the shade fully 1. Raise the shade fully to the top. to the top. 2. Grasp the tube with 2. Grasp the tube with your right hand making your left hand making sure it does not rotate. sure it does not rotate. 3. Referring to the 3. Referring to the pictures below, turn pictures below, turn the white ribbed wheel the white ribbed wheel in the direction of the in the direction of the arrow one full rotation. arrow one full rotation. 4. Test the shade.

Cordless Controls

4. Test the shade. Repeat if necessary.





INCREASE

Repeat if necessary.

 
the boutique

Releasing a Locked Shade

A shade may become stuck in the down position if pulled with excessive force.

To release if locked in the down position:





If the adjustment wheel is

on the LEFT, turn it 1/4 of a

on the **RIGHT**, turn it 1/4 of

Dressing the Shade

Steaming the Shade

a turn in this direction.

Like every fabric treatment, a brand new window fashion right out of the box may have wrinkles.



Many of the wrinkles will simply hang out after a few days. However, for best results, we recommend steaming your shade once it is installed.

If a professional steamer is unavailable, a standard iron with a steam button will work iust as well.

Dressing the Shade

Part of the beauty of a fabric shade is the folding of the pleats. Often, a pleat on a new shade will fold in an unusual way.

Once the shade is raised, a little dressing of the pleats (pulling them into the desired position) may be necessary.

The shade will gradually develop a memory for how the pleats should hang, and little or no dressing will eventually be needed.

Care and Cleaning

It is recommended that Fabric Roman Shades be vacuumed periodically with a drapery hose attachment.

Professional cleaning is recommended for all Fabric Roman Shades. A professional drapery cleaner may be found in the vellow pages or on the internet.

Warning

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.

 Always keep cords and bead chains out of children's reach.

• Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

• Do not tie cords together. Make sure cords do not twist together and create a loop.

• Attach tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks. Fasteners provided with the tension device may not be appropriate for all mounting surfaces. Use appropriate anchors for the mounting surface conditions.

• Do not remove looped cord from cord shroud.

Canadian Customers: For More Safety Information 1-866-662-0666 • www.healthcanada.gc.ca/blindcords Pour Plus De Renseignement Sur La Sécurité: 1-866-662-0666 • www.healthcanada.gc.ca/cordons-stores Installation Instructions for

Fabric Roman Shades



Congratulations on the purchase of your new Fabric Roman Shade with Cordless Controls!